


XRS Roll Up Series Opener Wiring Diagram

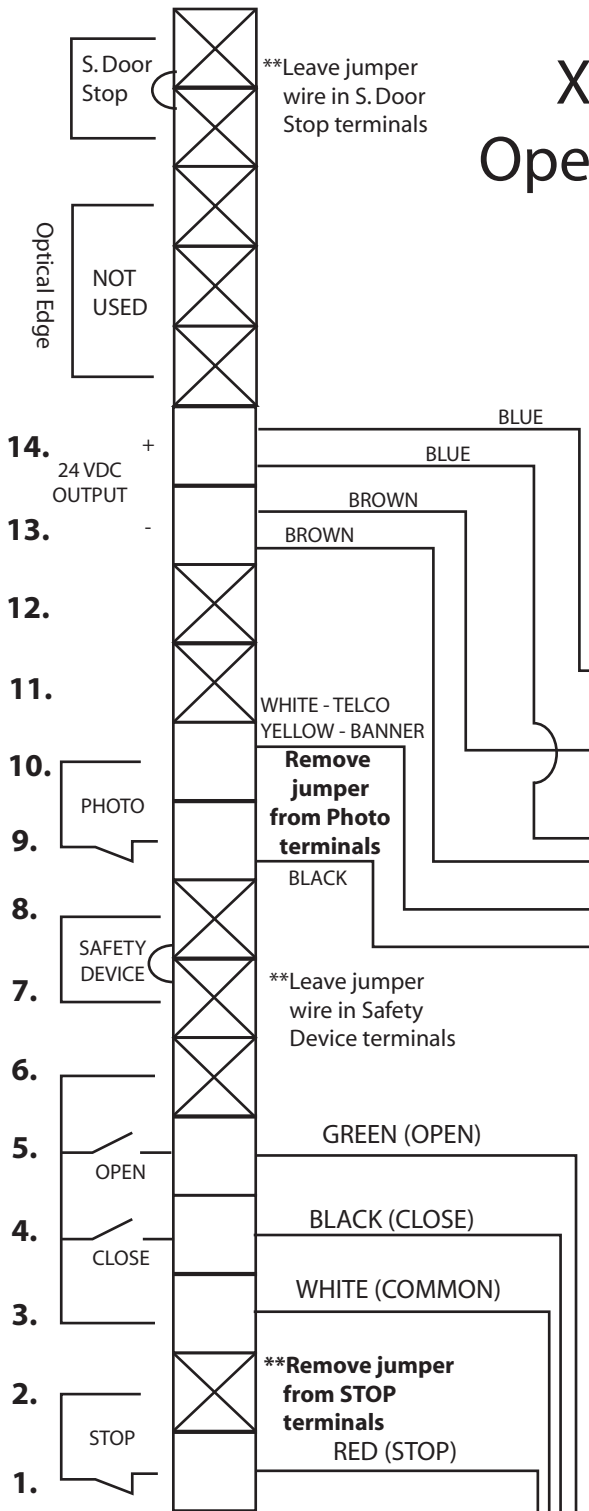

**Leave jumper wire in S. Door Stop terminals

Remove jumper from Photo terminals


**Leave jumper wire in Safety Device terminals

**Remove jumper from STOP terminals

****RECEIVER EYE****
 - FOR TELCO EYES USE THE BLACK AND WHITE WIRES.
 - FOR BANNER EYES USE THE BLACK AND YELLOW WIRES.

**IMPORTANT INFORMATION ABOUT WIRING AUTOMATIC CAR WASH CONTROLS TO THE XRS ROLL UP DOOR

All contacts from the car wash need to be DRY contacts. Voltage MUST NOT be sent from the car wash to the door. If car wash signals do send voltage relays must be used to convert these signals to dry contacts.
 The opener for the XRS Roll Up Door uses DC control voltage. If voltage is sent to the opener from the car wash, improper operation or opener damage may occur.

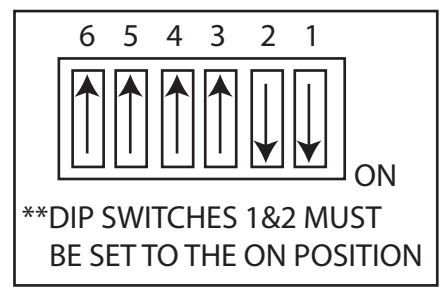

CLOSING TIMER SETTINGS

****OPTIONAL****

****Potentiometer P1 is not used****

1. Turn P2 clockwise to adjust closing time from 1-90 sec.
2. Timer is off when P2 is set all the way to the counterclockwise position.

****Note: To be sure wires are run to the correct terminals, count up from the bottom and hook wires to corresponding terminals shown here.**

A terminal with a X through it is not used. Do not hook any wires to a terminal marked with a X.

FROM 3 BUTTON STATION

